

## nViewer Lite mobile app (iPhone, iPod touch, iPad and Android) for Remote Access to HSR DVRs

This document describes how to connect to an HSR H.264 Digital Video Recorder (DVR) using the nViewer Lite mobile app. It also covers how to operate nViewer Lite to view live video.

### nViewer Lite mobile app Installation

The nViewer Lite mobile app is compatible with HSR-TxxxM and HSR-xxxM DVRs.

**Note:** You should always install the most recent version of firmware available for your DVR. Check the Hunt Electronics Website at <http://www.huntcctv.com/update-HVR.asp> for the latest firmware upgrades.

### Minimum Requirements for the nViewer

 
The nViewer Lite mobile app minimum requirements are:

- Supported Apple® models
  - Apple iPhone 3GS and later running OS v3.1.3 or later
  - Apple iPod touch 3rd generation and later
  - Apple iPad1 and 2
- Supported HUNT DVRs: HSR-TxxxM and HSR-xxxM DVRs.
- Internet connection to the HSR-TxxM and HSR-xxxM DVRs.

## Installing the nViewer Lite mobile app

To install the nViewer Lite mobile app:


1. From your Apple iPhone or iPod touch, tap the App Store icon. ... or Market on your Android.

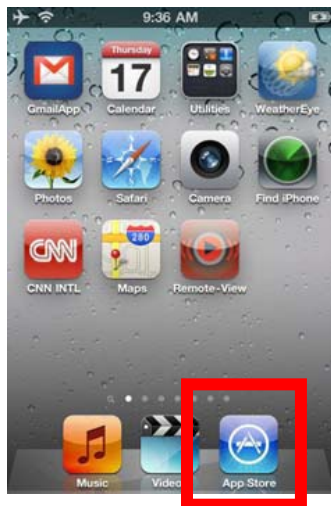

2. At the prompt, enter your Apple ID and Password.



**Note:** To install an application from the Apple App Store, you must have a valid Apple iTunes account.

 Tap Search, and then type nViewer Lite in the Search field.

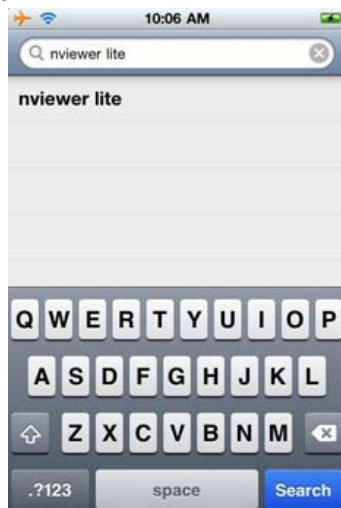


nViewer Lite mobile app (iPhone, iPod touch) for Remote Access to HSR DVRs

  3. Tap FREE twice.

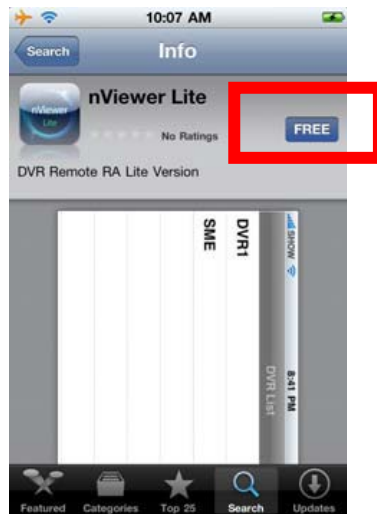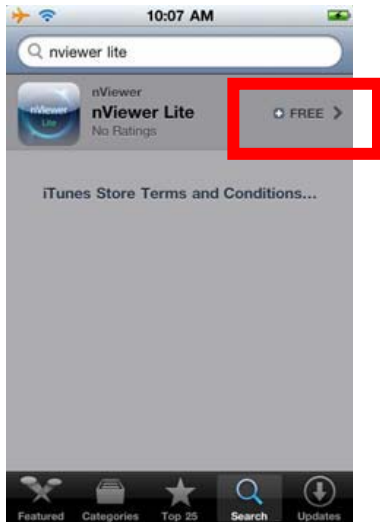

 4. Tap INSTALL.

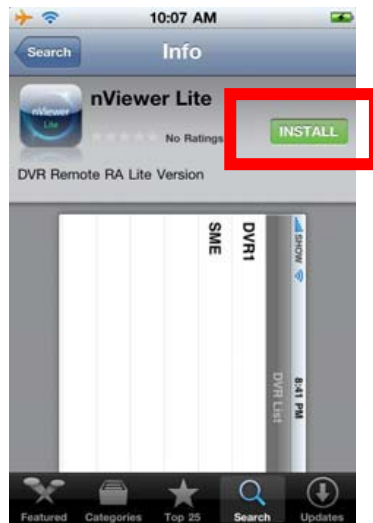

5. Follow the instructions to download and install the application.

6. When the application is successfully installed, the nViewer Lite icon appears on the device.



Adding a DVR to the nViewer Lite mobile app

**Note:** Up to 32 HSR DVRs can be registered.

To add and register an HSR DVR:

1. Launch the nViewer Lite mobile app.

2. Select + on the DVR server list.

 


3. In the Server Name field, type a unique name to identify the DVR.



4. In the appropriate fields, type the IP Address, HTTP and RTSP Port numbers, ID and Password of the HSR DVR (see step 4 in HSR DVR Network Configuration). HSR default username and password are ADMIN and 1234, respectively.

**NOTE:** If the defaults are changed, the ID and password (numeric only) are case sensitive.

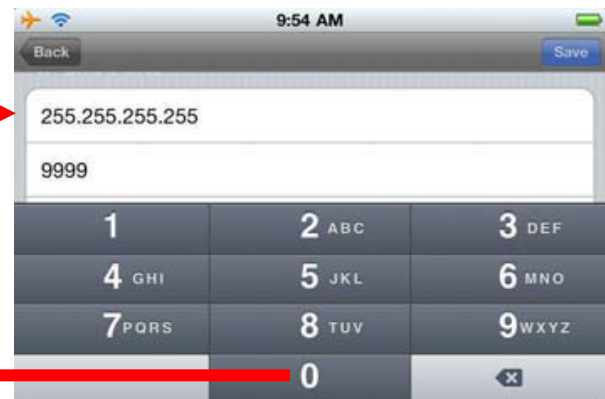



## 5. Tap Save.

The list of registered HSR DVR information displays.



## Live Video Viewing

The nViewer Lite mobile viewing app features Live View: single camera or multiple (quad) camera views. Tap on nViewer Lite on your Apple mobile device to access nViewer Lite.

**Note:** The HSR DVR video quality setting might need to be adjusted to optimize video performance for using the nViewer-lite app. Changing the video quality settings might affect the duration of saved video. See the HSR User Guide RECORD SETUP section for details.

To view live video:

 
1. With the HSR DVR connected to the network and the nViewer Lite mobile app launched, tap the name of the HSR DVR to which you want to connect.



2. If prompted (for example, when Auto Login is set to OFF), log on. The ID and password are case sensitive.



After connecting to the DVR (which may take a few seconds), the nViewer Lite Live View screen displays.

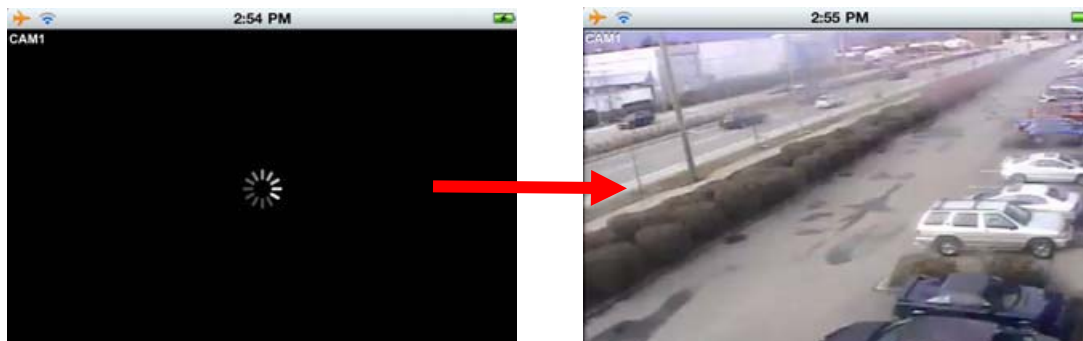

nViewer Lite mobile app (iPhone, iPod touch) for Remote Access to HSR DVRs

3. To view the remaining channels, swipe the screen from right to left to see video from the next channel and from left to right to see video from the previous channel.

4. To see the Control Panel, tap anywhere in the Live View.



5. To change to the multi-camera view, tap the multi-channel icon.



6. To switch to full screen mode on a particular channel, double-tap the appropriate image.

7. Tap on the Disconnect Icon to disconnect the nViewer Lite mobile app from the HSR DVR. You will be returned to the list of available HSR DVRs.

